

# Smart TV

## Getting Started

### Introduction:

A Smart TV is a TV with an inbuilt computer that functions much in the same way as a smartphone or tablet, but without the touch screen; instead it uses a smart remote which you can point at the screen a bit like a laser pointer mouse in order to click on what you want, say a menu or button. So like a smartphone or tablet, you can browse the web, and download apps. There are apps for games, or various on demand TV channels, such as iPlayer, ITV player, 4OD, etc.

### Using the TV:

In order to watch satellite TV you must switch on the TV from its remote control, called a smart remote. On the right is a picture of the smart remote. To switch on the TV, first you must press the circular red button  located at the top.

Once the TV is on, depending on what you want to do, say you want to watch satellite TV, or a DVD, or play games, you may need to select the input coming from the satellite TV box (Sky Set Top Box), or the PlayStation 3. The sky box is connected to the TV via the HDMI 1 port, and the PlayStation 3 is connected to the TV via the HDMI 2 port. Please make sure the Sky Box or PlayStation 3 is switched on before trying to select to select it on the TV, as it will not appear in the list if it isn't switched on. After switching them on, please press the 'source'  button on the TV remote control, and then cycle through the various inputs by tapping the 'source' button until HDMI 1 or HDMI 2 is selected.



Now that the TV is ready to go. If you don't know how to switch on or use the Sky Box or the PlayStation 3, please consult the respective user guide for more information on how to operate and use them.

### Recharging the batteries:

If the Smart TV remote control is unresponsive, it may need its batteries recharged. To remove the batteries please remove the back cover first. Removing the back cover is done by pulling on the small tab at the bottom of the remote. There are spare rechargeable batteries in the drawer below the TV that should be fully charged. Place them into the remote and replace the cover. The empty batteries need to be recharged before placing in the drawer. The batteries will take about 4 hours to recharge. Once the 4 hours are up, simply remove the batteries from the charger and place them into the drawer.